

BRAKE CHECK ADVISORY

AIR BRAKE SYSTEM

- 1. Compressor Maintains Full Reservoir Pressure**
- 2. Push Rod Travel Within Limitations On All Chambers**
- 3. No Audible Air Leaks**
- 4. Glad Hands And Lines Are Secure**
- 5. Drums, Bearings And Tires Are Not Overheating**
- 6. Trailer Supply Valve Operates Properly**

HYDRAULIC BRAKE SYSTEM

- 1. Pedal Pressure**
- 2. Vacuum Booster Is Operating**
- 3. Drums For Overheating**
- 4. Hydraulic Fluid Leaks**

TRAILER BRAKE SYSTEMS

(ELECTRIC, SURGE, VACUUM, AIR ACTIVATED HYDRAULIC)

- 1. Disconnect Brake System From Tow Vehicle For Electric And Vacuum Brake System**
- 2. Activate Break-Away Devices And Lock Trailer Brakes "ON"**
 - Electric Brakes: set break-away switch**
 - Surge Brakes: pull and lock mechanical lever**
 - Vacuum and air activated Hydraulic Brakes: disconnect both (2) hoses to trailer**
- 3. Perform "Tug" Test By Attempting To Pull Trailer**
Trailer Wheels Should Now Be Locked And Not Move Or Skid
- 4. Reconnect Break-Away Devices**